

ASSEMBLY INSTRUCTIONS

ATTENTION: THIS PRODUCT IS NOT FOR COMMERCIAL USE
INTENDED FOR RESIDENTIAL USE ONLY.

RUS487W-WM



- ⚠ Use the correct bolts as indicated. Do not tighten any of the bolts until the swing is completely assembled.
- ⚠ Do not discard any of the packaging until you have checked that you have all of the parts and fittings required.
- ⚠ Keep children away during assembly. This item contains small parts that can be swallowed by children. Children should always be under direct adult supervision while using this product.
- ⚠ Retain these assembly instructions for future reference.
- ⚠ Quote the following FQC NO. when contacting the service center.

SERVICE CENTER TOLL FREE NO.

TEL: 1-877-539-7436

FAX: 1-877-539-7439



DON'T RETURN TO STORE!

PAGE 1 OF 8

COURTYARD CREATIONS INC.

A. Read the instructions thoroughly. Acquaint yourself with the inventory of parts and the accompanying drawings to ensure safe and proper assembly.

B. You will need the following tools:





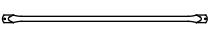








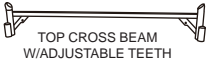


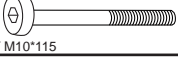
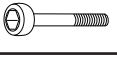
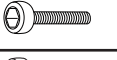
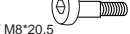
- Phillips Screwdriver 

 

 









 


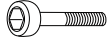




- Nut Wrench (See Part #37) 

- Hex. Key Wrench (See Part #38) 

C. Lay out all of the parts on a flat surface and identify them using the table below.

PARTS LIST

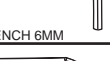PART NO.	MATERIAL CODE	PART	Q'TY
1	RUS487W-CS09-8	 TOP CROSS BEAM W/ADJUSTABLE TEETH	1
2	62RUS4060N101	 FRONT UPRIGHT SUPPORT	2
3	62RUS4060N201	 REAR UPRIGHT SUPPORT	2
4	62RTS406KI101	 LATERAL CROSS BRACE	2
5	62RUS487WH102	 REAR CROSS BRACE	1
6	RUS487W-CS01-3	 RIGHT SEAT ARM	1
7	RUS487W-CS01-2	 LEFT SEAT ARM	1
8	62RUS487WH103	 FRONT SUPPORT BRACE	1
9	62RUS487WH104	 BACK SUPPORT BRACE	1
10	RUS487W-CS11-1	 SEAT ASSEMBLY	2
11	RUS487W-CS20-1	 TABLE TOP	1
12	62RUS487WT101	 TABLE BOTTOM FRONT SUPPORT	1
13	62RUS487WX102	 TABLE BOTTOM BRACE RIGHT	1
14	62RUS487WX101	 TABLE BOTTOM BRACE LEFT	1
15	62RUS487WM101	 SWING ARM TUBE	4
16	28000221002	 LEG CAP	4
17	17C01A0930051Y4	 BOLT M10*115	4
18	17C01A0722011Y4	 BOLT M6*65	6
19	17C01A0714003Y4	 BOLT M6*40	8
20	17C01A0854211Y4	 BOLT M8*20.5	1

PART NO.	MATERIAL CODE	PART	Q'TY
21	17C01A0706002Y4	 BOLT M6*16	2
22	17C01A0716072Y4	 BOLT M6*45	4
23	17C17A1306001Y4	 SCREW ST4.2*16	4
24	17C17A0403001Y4	 SCREW ST4.2*12	2
25	17FA09070701-Y4	 WASHER d10.5*D21*2.0	8
26	17FA05050401-Y4	 WASHER d6.5*D16*1.2	30
27	17FA08060601-Y4	 WASHER d8.5*D17*1.6	1
28	17D02A050501-Y4	 STEEL NUT M10*1.5	4
29	18000C23001	 PLASTIC NUT M6*P1.0	10
30	18060615180101	 PLASTIC WASHER	1
31	17GA20405201-Y3	 SUSPENSION SPRING	2
32	18000626024	 CANOPY/FRAME CONNECTOR	2
33	28000J59001	 PLASTIC SCREW	2
34	18000337003	 BOLT CAP M10	4
35	18000337002	 BOLT CAP M6	24
36	18000337005	 BOLT CAP M8	1
37	17KAB1201----Y4	 NUT WRENCH 13&17MM	1
38	17KAA0201----Y4	 HEX.KEY WRENCH 6MM	1
39	RUS487W-CS18-1	 CANOPY	1
40	61R487WG00001BA	 BASKET	1



ASSEMBLY (Note: When fastening with nuts and bolts, always use a washer (#25, #26, or #27) between the tube and the bolt or the tube and the nut.)

Step 1:
Fasten the front and rear upright supports (#2 and #3) at the top by using bolts (#17), washers (#25), and steel nuts (#28). Repeat the same procedure for both sides. Keep the bolts loose. See Fig. A – Step 1.

Step 2:
At both ends, insert the assembled upright supports (#2 and #3) into the top cross beam w/adjustable teeth (#1). Tighten all of the nuts and bolts now. See Fig. A – Step 2.

Step 3:
Fasten the lateral cross braces (#4) to the upright supports (#2 and #3) by using bolts (#18), washers (#26), and plastic nuts (#29). Repeat the same procedure for both sides. See Fig. A – Step 3.

Step 4:
Fasten the rear cross brace (#5) to the rear upright supports (#3) by using bolts (#18), washers (#26), and plastic nuts (#29). Tighten all of the nuts and bolts. See Fig. A – Step 4.

Step 5:
Insert the leg caps (#16) into all of the base feet. See Fig. A – Step 5.

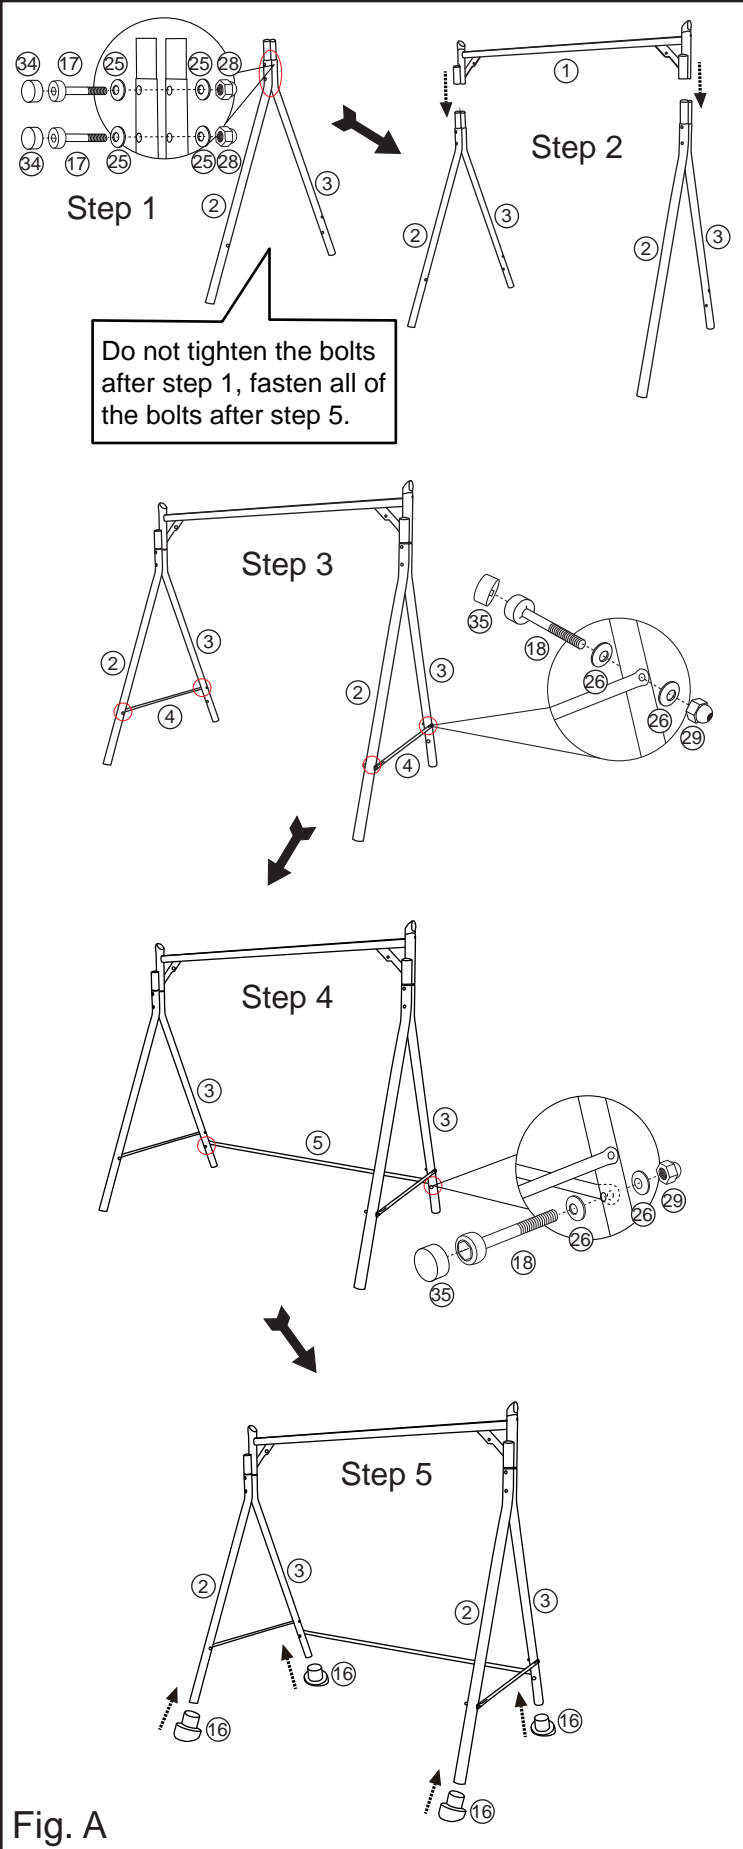


Fig. A



Step 6:
Slide the canopy/frame connectors (#32) onto the canopy (#39). Fasten them together by using screws (#23). Make sure that the teeth of the canopy/frame connectors are facing towards the inside of the frame.
See Fig. B – Step 1 and Step 2.

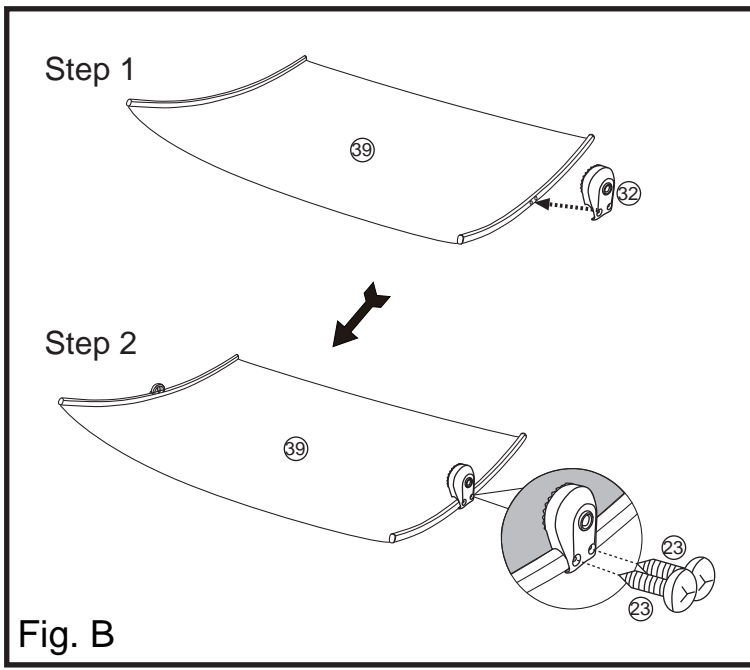


Fig. B

Step 7:
Fasten the canopy/frame connectors (#32) to the adjustable teeth on the top cross beam w/adjustable teeth (#1) by using a plastic screws (#33). See Fig. C – Step 1 and Step 2.

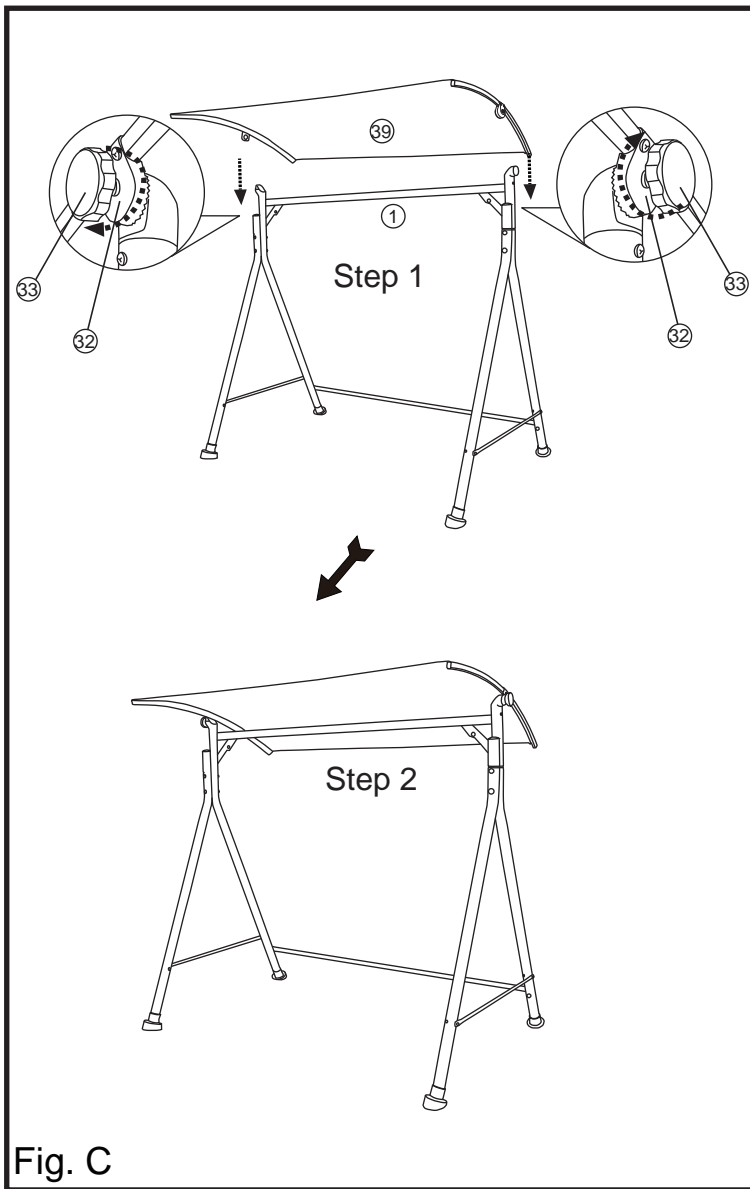


Fig. C



Step 8:
 Insert the seat arms (#6 and #7) into the front support brace (#8) and back support brace (#9).
 See Fig. D – Step 1 and Step 2.

Note:
 1. The labels marked "L" and "R" on the seat arms (#6 and #7) should coincide with Figure D - Step 1 to ensure proper assembly.
 2. Make sure that the holes in the supports, the arms, and the protective covers align with one another.

Step 9:
 Open both of the seat assemblies (#10) and attach their backs to the seat arms (#6 and #7) and support braces (#8 and #9) by using bolts (#19) and washers (#26). Repeat the same procedure for both sides. See Fig. D – Step 3.

Step 10:
 Place the table top (#11) onto a non-abrasive surface, such as a carpet, with its underside facing upwards. Fasten the table bottom front support (#12) to the table top by using bolt (#20), washer (#27), and plastic washer (#30). See Fig. D – Step 4.

Step 11:
 Insert the table bottom braces (#13 and #14) into the table bottom front supports (#12). Repeat the same procedure for both sides. See Fig. D – Step 5 and Step 6.

Note:
 The labels marked "L" and "R" on the table bottom braces (#13 and #14) should coincide with Figure D - Step 5 to ensure proper assembly.


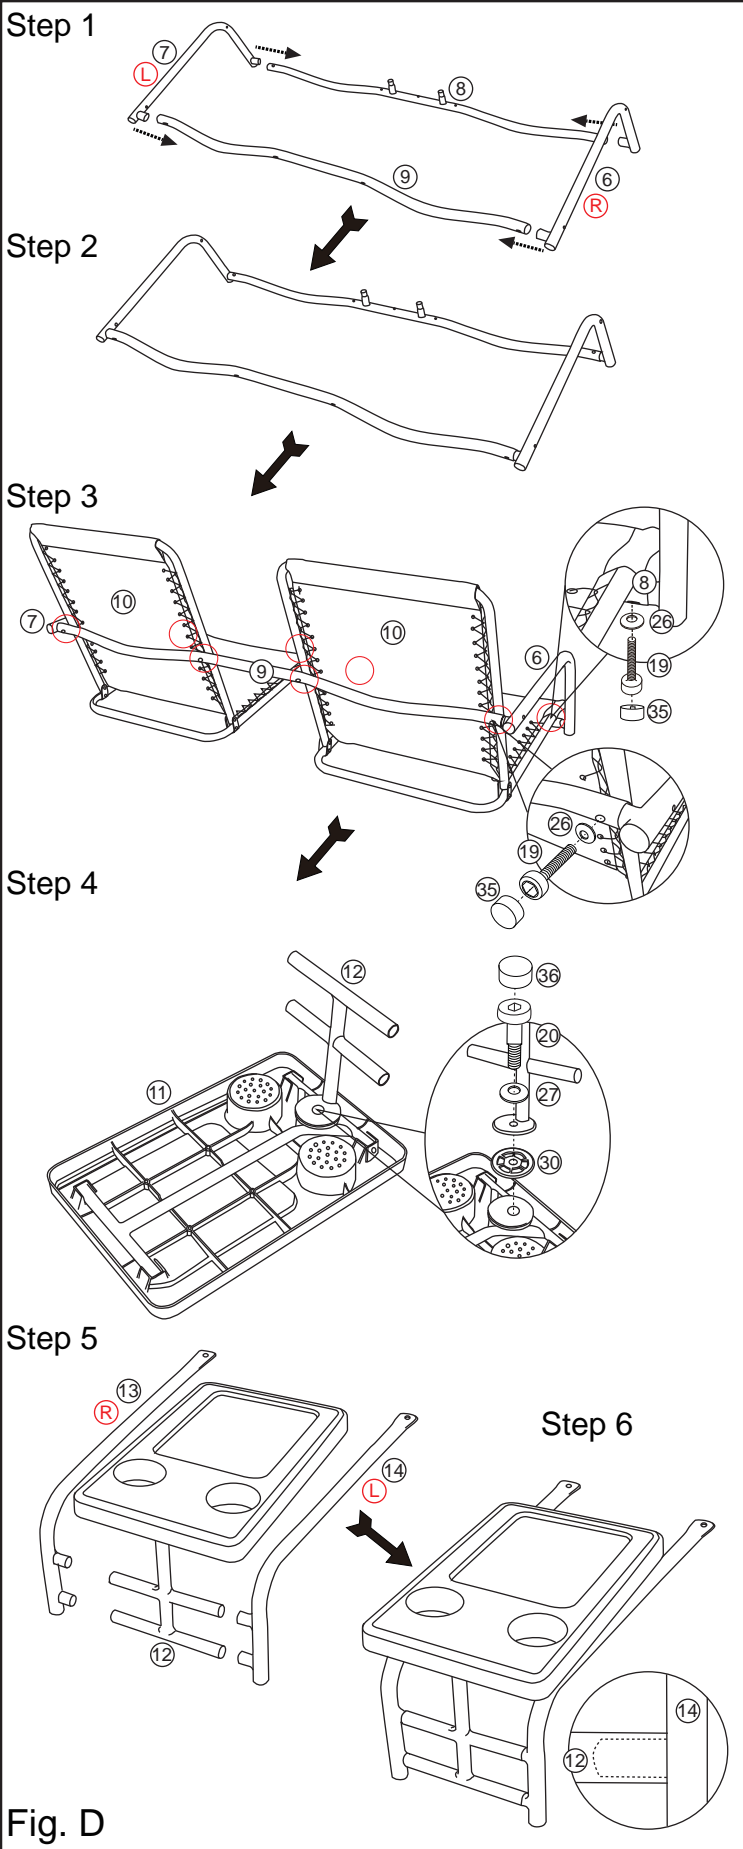



Fig. D




Step 12:
 Insert the table bottom braces (#13 and #14) into the connector tabs located on the front support brace (#8). Fasten together with screws (#24). See Fig. E – Step 2.
 Fasten the table bottom braces (#13 and #14) to the back support brace (#9) by using bolts (#21) and washers (#26). See Fig. E – Step 1.

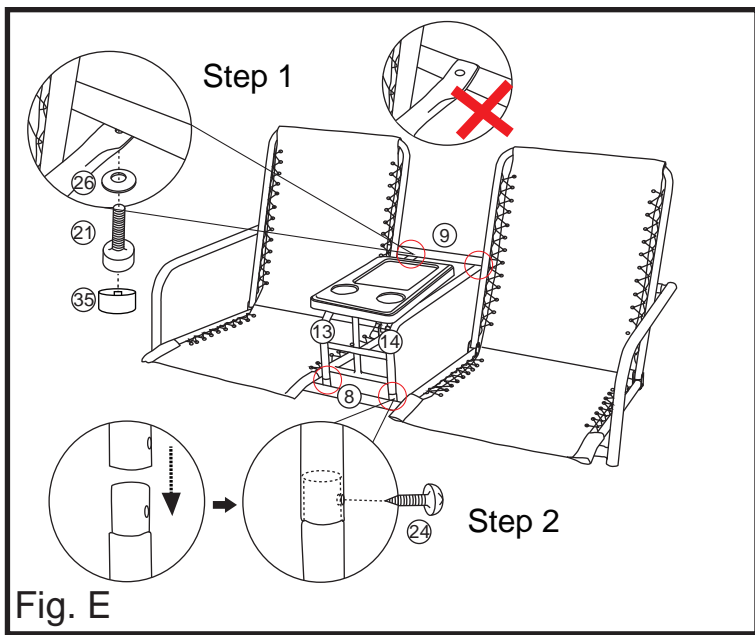

Step 13:
 Place the basket (#40) into the table bottom front support (#12) and back support brace (#9). Secure the basket to the table bottom front support (#12) and back support brace (#9) by using the velcro straps. See Fig. F.

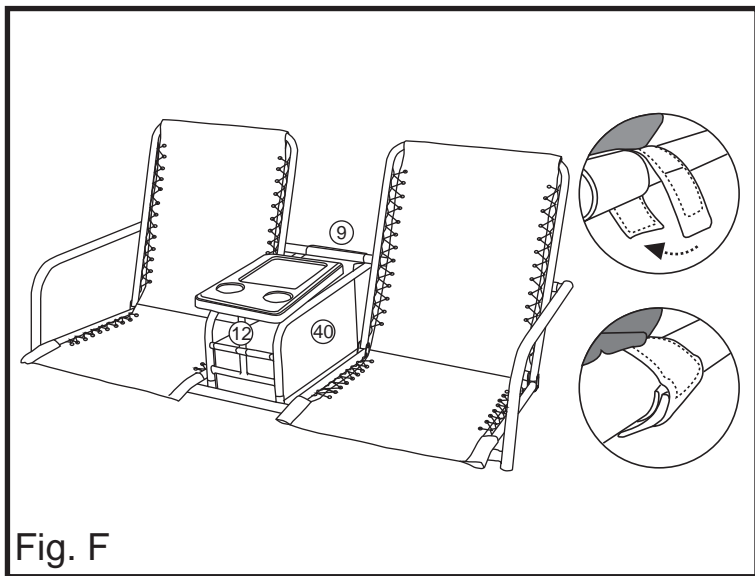

Step 14:
 Fasten the swing arm tubes (#15) to the seat arm tubes (#6 and #7) by using bolts (#22), washers (#26), and plastic nuts (#29). Repeat the same procedure for both sides. See Fig. G.

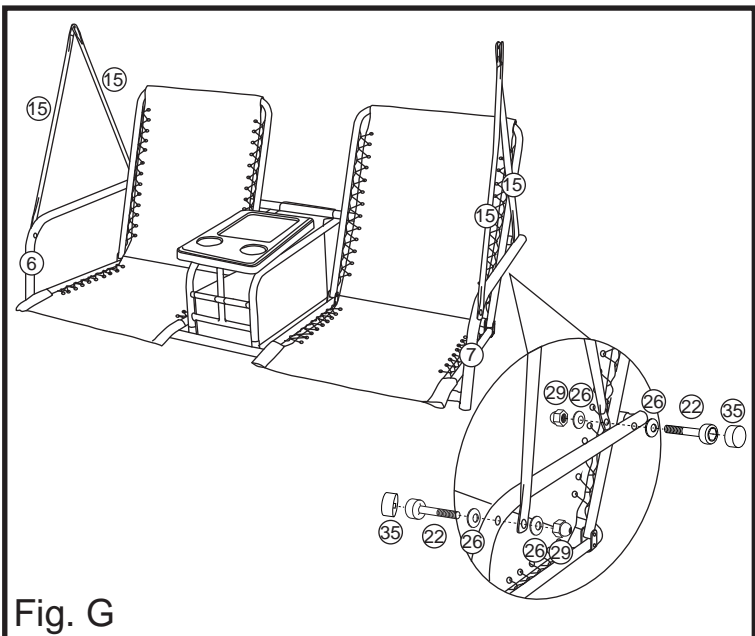

Step 15:

Hook the suspension springs (#31) into the top of both holes of the swing arm tubes (#15). Repeat the same procedure for both sides. See Fig. H.

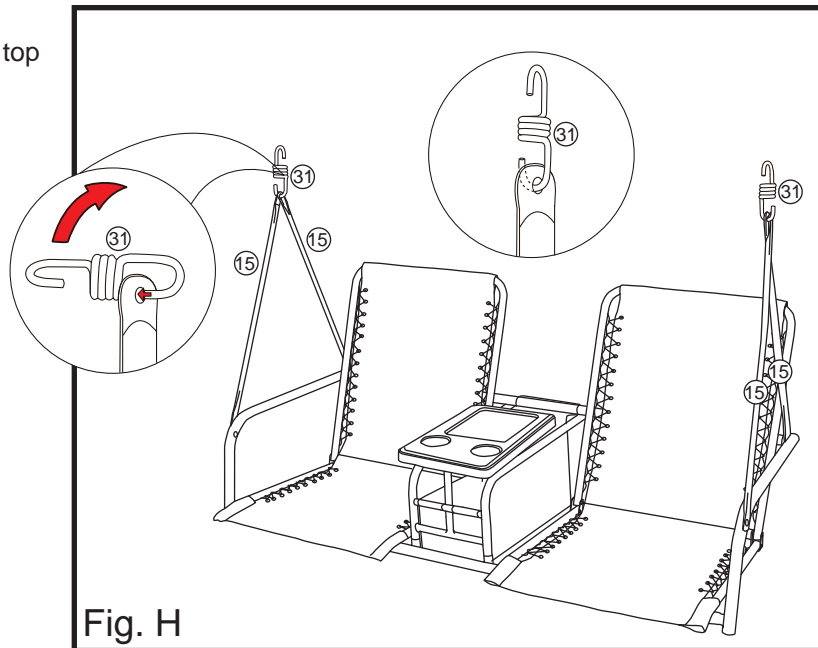


Fig. H

Step 16:

Hang the opposite ends of the suspension springs (#31) into the holes located on the angled braces of the top cross beam w/adjustable teeth (#1). Repeat the same procedure for both sides. See Fig. I.

To assure stability, double check that all of the bolts have been completely tightened and cover them with bolt caps (#34, #35, and #36).

Warning:

Make sure that both ends of the suspension springs (#31) go completely through the holes in the angled braces on the top cross beam w/adjustable teeth (#1) and the swing arm tubes (#15).

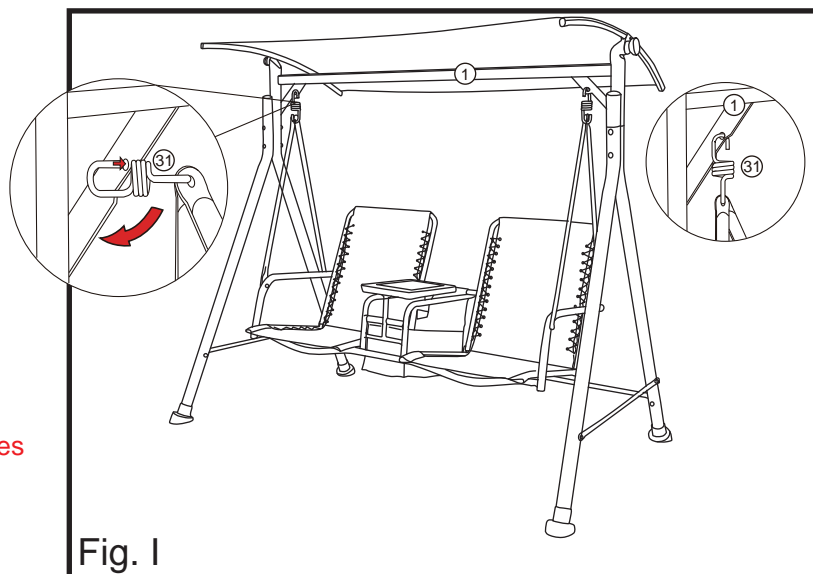


Fig. I

Cleaning and Maintenance

- Wash frame and fabric parts with mild soap and water, rinse thoroughly, and dry completely. Do not use bleach, acid, or other solvents on the frame or fabric parts.
- We recommend the use of furniture covers when not in use.
- Inspect and tighten all bolts and fasteners on a regular basis to ensure the proper performance and safety of your swing.
- In order to prolong the life and beauty of your swing, we recommend that it be stored in a dry and protected area during off season periods.

Special Warnings

1. The user of this swing should always inspect it before each use.
2. It is essential to place this swing on level ground and not less than 6 feet away from any obstruction, such as fences, garages, houses, overhanging branches, laundry lines, or electrical wires.
3. Check the tightness of all of the nuts and bolts on a regular basis.
4. Make sure that the suspension springs are properly secured before each use.
5. Always remove the canopy in heavy wind conditions; otherwise the swing may tip over and cause damage to its parts.
6. The manufacturer will not accept responsibility for unauthorized repairs or modifications to the swing or its parts.
7. Oil all of the metal parts that move regularly.
8. Weight limit is 700 lbs.



DON'T RETURN TO STORE!
PAGE 7 OF 8

STOP!

Missing A Part? No Need To Go Back To The Store

The store where you made your purchase
does not stock parts for this item.

If you need parts,
whether they are missing or damaged,
Call Toll Free:

TEL: 1-877-539-7436

FAX: 1-877-539-7439

Call us between 9:00 AM and 4:30 PM
Eastern Time Monday through Friday

READ THESE INSTRUCTIONS COMPLETELY BEFORE STARTING ASSEMBLY

- ★ SEPARATE AND IDENTIFY ALL PARTS, MAKING SURE THAT YOU HAVE ALL OF THE PARTS LISTED.
- ★ IF YOU DO NOT LOCATE ALL OF THE PARTS LISTED, INSPECT THE PACKING MATERIAL FOR SMALL PARTS THAT MAY HAVE BECOME SEPARATED DURING SHIPMENT.
- ★ IF YOU EXPERIENCE ANY DIFFICULTY DURING ASSEMBLY OR IF ANY PARTS ARE MISSING OR DAMAGED, CALL THE HELP LINE AT 1-877-539-7436 BEFORE RETURNING THIS ITEM TO THE STORE.
- ★ PROVIDE THE FOLLOWING INFORMATION WHEN CALLING:
 - 1-MODEL NUMBER OF THE PRODUCT.
 - 2-PART NUMBER AND MATERIAL CODE OF THE PART FROM THE PARTS LIST.
- ★ MOST PROBLEMS CAN BE RESOLVED WITHOUT RETURNING THIS PRODUCT TO THE RETAILER.

